
USER MANUAL

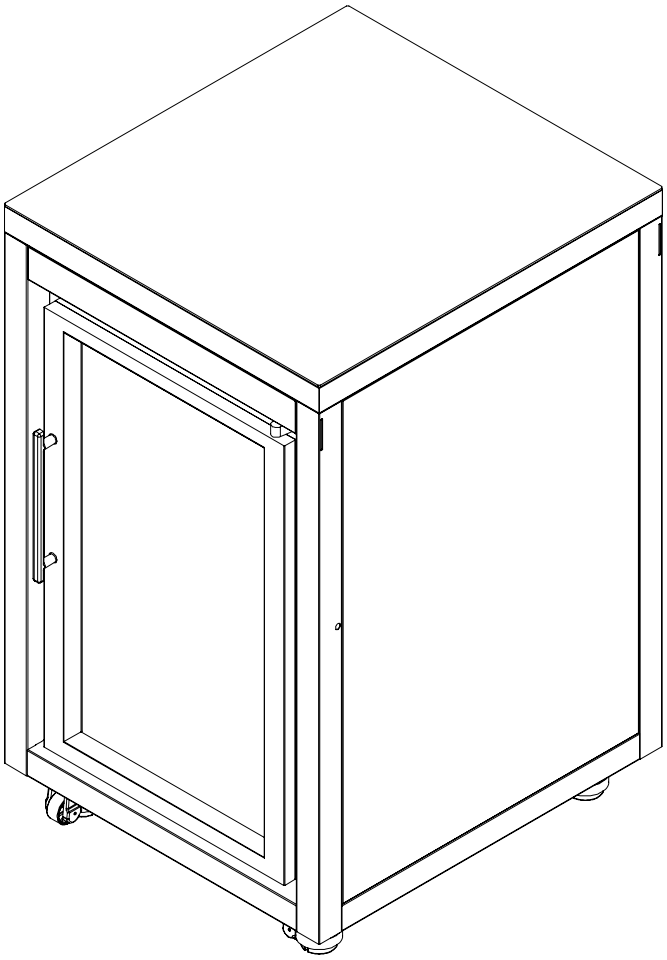

Description: Outdoor Kitchen Module with Refrigerator
Article number: TB16C01

Thank you for purchasing this product!

Product Identification

Product Name: Outdoor Kitchen Module with Refrigerator
Model: TB16C01

Technical Specifications

• **Dimensions:** 550 x 600 x 974 mm
• **Materials:**
- Countertop: 304 stainless steel
- Frame: 430 stainless steel with outdoor powder coating
• **Refrigerator Volume:** 63L
• **Voltage:** 220–240 V~, 50–60 Hz
• **Power:** 85 W
• **Climate Class:** SN-T(16°C-43°C)

Refrigerant: R600a(18g)-GWP＜150

IP Rating: IPX4

Symbols on product and in this manual:

• **Warning Triangle** – Important safety instructions
• **IPX4** – Protected against splashing water (not immersion)
• **WEEE (crossed-out wheeled bin)** – Dispose of electrical components at authorized recycling facilities
• **CE** / **UKCA** – Complies with EU and UK safety requirements

Safety Warnings


WARNING: Risk of fire / flammable materials

• **WARNING**: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
• **WARNING**: Do not damage the refrigerant circuit.
• **WARNING**: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

General Safety & Usage
• Read all instructions before use.
• Connect only to a grounded outlet.
• **IPX4** protects against splashing water, **not full water exposure**. Do not immerse the refrigerator or expose it to heavy rain.
• Keep out of reach of children.
• Do not overload shelves or countertop.
• Avoid direct sunlight and frost without protective cover.
• If powder coating is damaged, repair immediately to prevent corrosion.

Installation Instructions

• Place the module on a flat, stable surface.
• Lock the casters after positioning.
• Connect the refrigerator to a suitable power outlet.
• Ensure proper ventilation around the refrigerator.
• Handle Installation:
a. Find the handle inside the fridge and position it on the front door.
b. Lift the door gasket to locate the screw holes.
c. Insert the screws provided through the handle into the holes.
d. Tighten the screws using a suitable screwdriver until the handle is firmly secured.
e. Put the gasket back in place after the handle is installed.
f. Check that the handle is straight and securely attached before use.

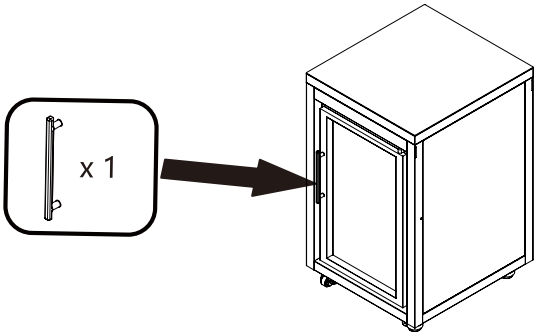

Detach the adhesive tape and secure with screws



Usage Guidelines

• Recommended ambient temperature: 16 °C– 43° C.
• Use protective cover during winter or heavy rain.
• Do not store perishable food requiring freezing (wine cooler type).
• Maximum load per shelf: 15 kg. Do not exceed this limit to avoid damage to the appliance or risk of injury.
• **Storing:** If possible, store your metal outdoor furniture in a dry place indoors. When stored outside, tilt the furniture and preferably use water-repellent covers. Make sure air can circulate to avoid moisture.

Maintenance & Cleaning

• Clean with mild soapy solution; avoid abrasive cleaners.
• Inspect powder coating regularly; repair if damaged.
Repair: If the powder coating comes off, rust may occur. To repair, wipe clean and repaint to restore protection.
• Do not use steel wool or sharp tools on stainless steel surfaces.
• Damp surfaces can be discoloured if substances containing iron remain on them.
• Matt parts can be shiny again if sprinkled with chalk, rubbed with a soft cloth, rinsed with water and wiped.

Troubleshooting

• Refrigerator not cooling → Check power supply and thermostat.
• Door not sealing → Inspect gasket and clean.
• Excessive condensation → Ensure proper ventilation.

Energy & Environmental Information

• Complies with EU Ecodesign and Energy Labelling Regulations.
• Dispose of according to WEEE Directive.

Disposal and Recycling (WEEE) This product is an electrical appliance and must not be disposed of with unsorted municipal waste. The crossed-out wheeled bin symbol indicates that the product requires separate collection. Please dispose of waste equipment at a designated collection point in accordance with local regulations. Note that the refrigerator contains refrigerant which requires professional handling during disposal.

Warranty & Service Contact

Your outdoor cabinet is covered against defects for a period of 24 months for parts and repair or replacement.

This warranty excludes surface rust and damage caused by abuse or neglect.

Conditions of Warranty

• The appliance must be operated and maintained according to the instructions supplied in this manual.
• Any repairs not under warranty must be performed by an authorized service agent.
• Use of non-original parts will void this warranty.

To Make a Claim

• Provide proof of purchase and contact your dealer or distributor.
• Warranty covers manufacturer defects in materials, workmanship, and finish under normal use.
• This warranty does not cover damage caused by misuse, neglect, improper installation, or unauthorized modifications.
• Transportation costs, removal, and reinstallation are not covered.

Exclusions

• Rust, corrosion, or discoloration caused by heat, abrasive cleaners, or environmental conditions.

Country of Manufacture: China